

## **MOBILE SCAFFOLD USE**

**QUICK REFERENCE GUIDE** 



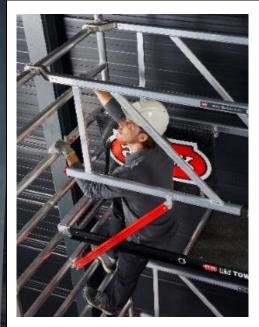

Access the working platform internally through the scaffold by climbing through the hatch deck using the rungs of the end frames as a ladder.

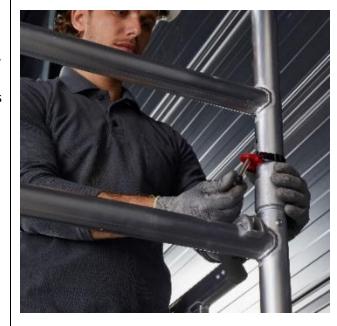

Ensure Frame
Locking Pins are in
place on the bottom
hole of the frame as
this will lock into the
frame below. (Note –
the top hole of the
frame does not
connect to the frame
below)

## FOR FURTHER INFORMATION / TECHNICAL QUERIES & INSTALLATION GUIDES CONTACT

Rapid Systems Pty Ltd Mobile: 0400 607 107

Web: <u>www.rapidsystems.group</u> YouTube: Rapid Systems

**PLEASE TURN OVER** 


## **MOBILE SCAFFOLD USE**

**QUICK REFERENCE GUIDE** 



Ensure Castor Wheels are locked in place by pushing down on locking clamp.

Adjust telescopic stabilisers for bracing stability
(Note: **DO NOT EXTEND PAST STOP WARNING**).

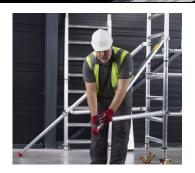

Ensure stabiliser clamps are secured tightly on the frame.





## FOR FURTHER INFORMATION / TECHNICAL QUERIES & INSTALLATION GUIDES CONTACT

Rapid Systems Pty Ltd Mobile: 0400 607 107

Web: <u>www.rapidsystems.group</u> YouTube: Rapid Systems